

Description: piezo electric diaphragm

Date: 7/28/2006 Unit: mm

Page No: 1 of 4




Specifications

Maximum input voltage	30 Vp-p	
Resonant frequency	2.6 ± 0.5 KHz	see Measurement Methods
Resonant impedance	300 Ω max.	see Measurement Methods
Electrostatic capacitance	30,000 ±30% pF	at 1 KHz / 1 V
Operating temperature	-20 ~ +70° C	
Storage temperature	-30 ~ +80° C	
Dimensions	Ø35.0 x H0.53 mm	
Weight	2.0 g max.	
Material	Brass	
Terminal	Wire type	
DC resistance	20 M Ω min.	Fluke 45 rate: Fast
		Measurement time: 1 second
		(only for ≤ 20 mm test)
RoHS	yes	

Appearance Drawing

Tolerance: ±0.5

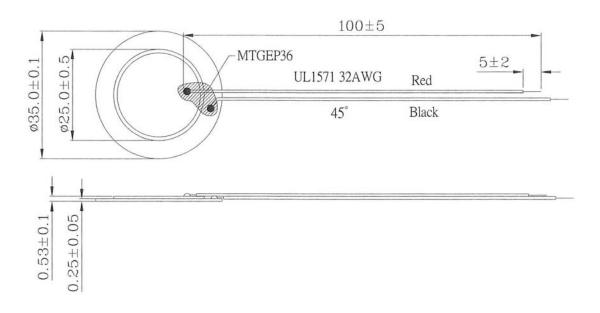

Phone: 800.275.4899 Fax: 503.612.2381 www.cui.com 20050 SW 112th Ave. Tualatin, OR 97062



Description: piezo electric diaphragm

Date: 7/28/2006

Unit: mm


Page No: 2 of 4

Measuring Methods

1) Resonant frequency / Resonant impedance

The piezo electric diaphragm should be clamped at a node point (as shown in the following figure) to be free from any mechanical stress. Measure its resonant frequency and resonant impedance by using a vector impedance analyzer or equivalent.

When the input frequency is swept within 100 Hz to 5 KHz, the resonant frequency is defined as the frequency where the impedance shows minimum value. This impedance should be the resonant impedance.

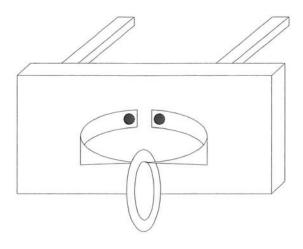

2) Static capacitance

The electrostatic capacitance should be measured at 120 Hz by using an L.C.R. meter (ex. HP4194A(H.P.)) or equivalent. The part should be clamped in the same way as the measurement or resonant frequency / resonant impedance mentioned above.

Mechanical Characteristics

Item	Test Condition	Evaluation Standard
Solderability	Stripped wires of lead wires are immersed in	90% min. of the stripped wires
(Connector excepted)	rosin for 5 seconds and then immersed in	will be wet with solder. (Except
	solder bath of 270 ±5°C for 3 ±0.5 seconds.	the edge of the terminal)
Lead Wire Pull Strength	The horizontal force of 3.0N (0.306kg) should	No damage or cutting off.
_	be applied to the double lead wire for 30 sec.	
Vibration	The diaphragm should be measured after	The value of the resonant
	applying a vibration amplitude of 1.5 mm with	frequency should be ±10% of the
	10 to 55 Hz band of vibration frequency to each	initial measurements.
	of the 3 perpendicular directions for 2 hours.	Electrostatic capacitance should
		be ±20% compared with the initial
		measurement. The SPL should
		be within ±10dB compared
		with the initial measurement.

Phone: 800.275.4899 Fax: 503.612.2381 www.cui.com 20050 SW 112th Ave. Tualatin, OR 97062



Description: piezo electric diaphragm


Date: 7/28/2006

Unit: mm Page No: 3 of 4

Environment Test

Item	Test Condition	Evaluation Standard
High temp. test	After being placed in a chamber at +80°C for	
	240 hours.	
Low temp. test	After being placed in a chamber at -30°C for	1
•	240 hours.	
Humidity test	After being placed in a chamber at +40°C and	
·	90±5% relative humidity for 240 hours.	The diaphragm will be
Temp. cycle test	The part shall be subjected to 5 cycles. One	after being placed at -
	cycle will consist of:	hours. The value of the

cycle will consist of:

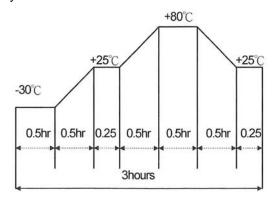

The diaphragm will be measured after being placed at +25°C for 4 hours. The value of the resonant frequency should be ±10%, the value of the electro static capacitance should be ±20% compared to the initial measurements. The resonant impedance should be 2,000 Ω max.

Test Conditions

Standard Test Condition Judgement Test Condition a) Tempurature: +5 ~ +35°C

a) Tempurature: +25 ±2°C

b) Humidity: 45 - 85%

b) Humidity: 60 - 70%

c) Pressure: 860-1060 mbar

c) Pressure: 860-1060 mbar


Phone: 800.275.4899 Fax: 503.612.2381 www.cui.com 20050 SW 112th Ave. Tualatin, OR 97062


Description: piezo electric diaphragm

Date: 7/28/2006

Unit: mm Page No: 4 of 4

Packaging

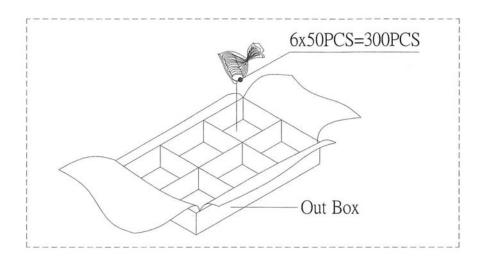

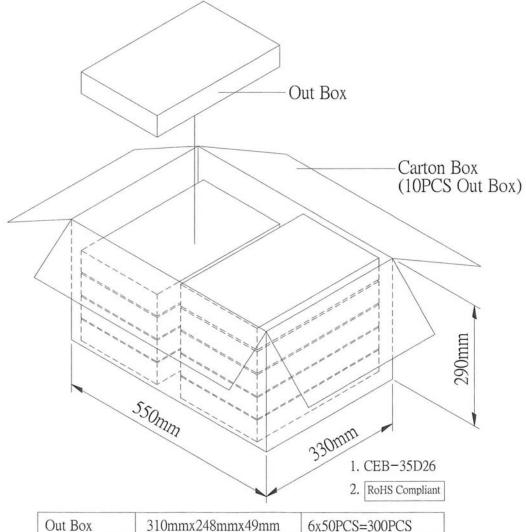

Phone: 800.275.4899 Fax: 503.612.2381 www.cui.com 20050 SW 112th Ave. Tualatin, OR 97062